

Installing the **Laser Cartridge TESTER 01**

Your New Cartridge Tester is designed to help you test your cartridges and carry out printer testing without the need for a computer link.



To use :

- 1 – Turn the printer OFF
- 2 – Attach the cable to the tester
- 3 – Connect the cable to the parallel port on the printer
- 4 – Turn the printer ON

For a 4-page test, PRESS **button “B”**

This will produce :

- 1 x half tones page**
- 1 x ghosting page**
- 1 x black page**
- 1 x white page**

For a black only, PRESS **button “A”**

This will produce :

- 1 x black page**

After use, turn OFF printer and remove cable