

## Installing the **Laser Cartridge TESTER 02**

Your New Cartridge Tester is designed to help you test your cartridges and carry out printer testing without the need for a computer link.



### **To use :**

- 1 – Turn the printer OFF
- 2 – Attach the cable to the tester
- 3 – Connect the cable to the parallel port on the printer
- 4 – Turn the printer ON

This will produce :

- Button BK x Black test page**
- Button C x Cyan test page**
- Button M x Magenta test page**
- Button Y x Yellow test page**
- Button CMY x Tricolor test page**
- Button TP x Internal printer test page (where is permitted)**

After use, turn OFF printer and remove cable