

## Installing the Laser Cartridge TESTER 03

Your New Cartridge Tester is designed to help you test your cartridges and carry out printer testing without the need for a computer link.



### To use :

- 1 – Turn the printer OFF
- 2 – Attach the cable to the tester
- 3 – Connect the cable to the parallel port on the printer
- 4 – Turn the printer ON

This will produce :

- Button 1 x 5% test page**
- Button 250 x 5% test page**
- Button 500 x 5% test page**
- Button 1000 x 5% test page**

After use, turn OFF printer and remove cable